 


FIELD REPLACEABLE UNIT DOCUMENTATION

Satellite™

2610/2750 Series

BATTERY PACK REMOVAL



1. Turn the computer upside down as shown.
2. Slide the **battery release lever** in the direction of the arrow.
3. Slide the **battery assembly** towards you and lift it out.

OPTIONAL PCMCIA CARD REMOVAL



1. Pull out the **eject button** of the PC card to be removed.
2. Press the **eject button** and remove the **PC card**.

NOTE: Before removing any PCMCIA device, make sure it is "STOPPED" in the PC Card Manager.

HDD REMOVAL



HDD slot cover

1. Turn the computer upside down.
2. Remove **one M2.5x8 black screw** securing **HDD cover** and pull out the cover.



HDD bracket

HDD

3. Slide the **HDD** forward to disconnect from P19 on the system board.
4. Lift out the **HDD**.

TOSHIBA

Tough Enough for Today's World.

Satellite™

2610/2750 Series

KEYBOARD REMOVAL



Latch



Keyboard holder

1. Open the display panel.
2. Remove the **keyboard holder** at the top of the keyboard.

KEYBOARD REMOVAL



M2x4 brass screw

Keyboard

3. Remove **two M2x4 brass screws** securing the keyboard.
4. Lift out the **keyboard** and lay it face down on the palm rest. Be careful not to apply pressure to the keyboard cable.

KEYBOARD REMOVAL



Keyboard cable

5. Disconnect the **keyboard cable** from **PJ14** on the system board and remove the **keyboard**.

MODEM REMOVAL



M2x4 brass screws

PJ701

Modem cable

1. Remove **two M2x4 brass screws** securing the modem board.
2. Lift up the front side of the **modem board** and remove it from the system board.
3. Disconnect the **modem cable** from **PJ701** on the modem.

TOSHIBA


Tough Enough for Today's World.

FIELD REPLACEABLE UNIT DOCUMENTATION

Satellite™


2610/2750 Series

EXPANSION MEMORY REMOVAL

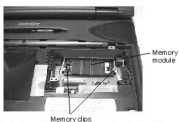

1. Gently push the **memory clips** outward and pull the **memory module** out of the connector at a 30 degree angle.

TOP COVER REMOVAL

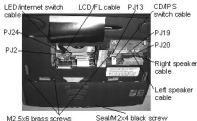

2. Turn the computer right side up and open the display panel.
3. Remove **two tapes** securing the speaker cables.
4. Disconnect the following five cables:
 - LCD/FL cable from P-J2
 - CD/PS switch cable from P-J13
 - Left and Right speaker cable from P-J19 and P-J20
 - LED/Internet switch cable from P-J24
5. Remove the **seal** covering top screw and remove **one M2x4 black screw** and **three M2.5x6 brass screws** securing top cover.

TOP COVER REMOVAL



1. Turn the computer upside down and remove the following thirteen screws:
 - 2 **M2.5x20 black screws**
 - 6 **M2.5x8 black screws**
 - 5 **M2.5x6 black screws** from battery slot and back of the computer



6. Lift up the back side of the top cover and display assembly and pass the **modem jack** through the opening in the upper cover.

CAUTION: When installing the top cover make sure that the **modem jack** cable is routed properly through the opening of the top cover.

TOSHIBA

 
Tough Enough for Today's World.

FIELD REPLACEABLE UNIT DOCUMENTATION


Satellite™

2610/2750 Series

FDD REMOVAL



 1. Disconnect the **FDD flexible cable** from **PJ7** on the system board.
2. Remove the **FDD**.



3. Remove **four M2.5x3 black screws** securing the FDD to the FDD case and separate the **FDD** from its case.
4. Disconnect the **FDD flexible cable** from the FDD.

CD-ROM/DVD ROM DRIVE REMOVAL



1. Carefully **lift up** the back side of the **CD-ROM/DVD-ROM drive** and remove it from **PJ10** on the system board.



2. Remove **two M2x6 brass screws** securing the CD-ROM/DVD-ROM connector board.
3. Separate the **CD-ROM/DVD-ROM connector board** and **CD-ROM/DVD-ROM connector brace** from the CD-ROM/DVD-ROM drive.
4. Remove **two M2x3 silver screws** securing the side brace on the CD-ROM/DVD-ROM drive.

TOSHIBA

 
Tough Enough for Today's World.

FIELD REPLACEABLE UNIT DOCUMENTATION

Satellite™

2610/2750 Series

COOLING FAN REMOVAL



1. Loosen **four flat head brass screws** securing the cooling fan.
2. Remove the cooling fan and disconnect the **fan cable** from **PJ6** on the system board.

RTC BATTERY REMOVAL




1. Remove the **tape** securing the RTC battery.
2. Disconnect the **RTC battery cable** from **PJ12** on the system board.
3. Lift out the **RTC battery**.

SYSTEM BOARD REMOVAL



1. Release the latches securing the **modem jack** and remove it.
2. Release the latches securing the **audio jack panel** and remove it.

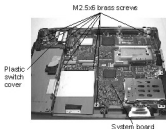

3. Remove **eight M2.5x6 brass screws** securing the system board and power supply board.
4. Lift out the **plastic switch cover**.

 
TOSHIBA

Tough Enough for Today's World.

Satellite™

2610/2750 Series

SYSTEM BOARD REMOVAL




5. Lift up the **system board and power supply board** from the front side and pull them out. Ensure that the eject buttons of the PC Card Slot is not caught on the bottom cover.
6. Lift out the **PC Card Slot cover**.

MEMBRANE SWITCH REMOVAL



1. Remove **three M2x4 black screws** securing the IPS switch assembly.
2. Lift out the **IPS switch assembly**.

SPEAKERS REMOVAL

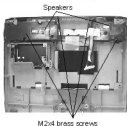


1. Remove **two M2x4 brass screws** securing each speaker.
2. Remove the **tape** securing the speaker cables and lift out the **speakers**.


TOSHIBA

Tough Enough for Today's World.

Satellite™

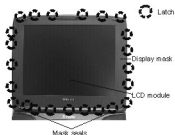2610/2750 SeriesDISPLAY MASK REMOVAL

1. Remove **two mask seals** at the bottom corners of the display assembly.
2. Remove **two M2.5x6 brass screws**.
3. There are **23 latches** securing the **display mask**. Carefully insert your fingers between the **display mask** and the **LCD module** and pry open the latches starting from the **top six latches**, to the **five latches on the right and left sides**, ending with the **six bottom latches**.

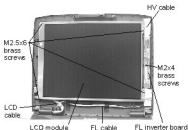FL INVERTER AND LCD REMOVAL

1. Remove all tapes and **one M2x4 brass screw** securing FL inverter board.
2. Carefully lift up the **FL inverter board** and disconnect the **FL inverter cable** from **CN1** and the **HV cable** from **CN2**.
3. Remove **four M2.5x6 brass screws** securing the LCD module.
4. Carefully rotate the **LCD module** from right to left of the LCD cover.
5. Disconnect the **LCD cable** from the LCD module and remove the **LCD module** from the computer.

TOSHIBA

Tough Enough for Today's World.