

Parts Information

N°	Toshiba PN	Description
1A	P000296950	PCB FFISY3
1B	P000296960	PCB FFIRL3
1C	P000296970	PCB FFUIF3
1D	P000296980	PCB FFIVL3
1E	P000296990	PCB FFILK3
3	P000291180	PCB FFIMW1
10	P000272230	COLOR LCD MODULE
13	P000272240	FL INVERTER
14	P000279550	KEYBOARD UNIT
14-A	UE2010P01KB-SP	KEYBOARD UNIT (SPANISH)
15	P000289330	HDD UNIT (12GB)
15-1	P000289340	HDD UNIT (12GB)
16	PA3001U-1BRL	BATTERY PACK
17	P000291190	FDD 3.5 INCH
17A	P000258840	FDD COVER, UPPER
17B	P000258850	FDD COVER, LOWER
17C	P000221830	FDD CONNECTOR
17D	P000258860	FDD SHIELD
17E	P000221850	FDD INSULATOR
17F	P000258870	FD EJECT BUTTON
17G	P000292110	FDD LABEL
18	P000258890	FDD CABLE
19	PA2450U	UNIVERSAL AC ADAPTER
20	P000182200	AC CORD SET
21	P000265510	NI-MH BATTERY
22	P000272290	SPEAKER
23	P000291220	CARDBUS SLOT
24	P000291230	MEMBRANE SWITCH
25	P000282750	STICK CAP SET
26	P000220300	MODULAR CABLE
27	P000272260	I/O ADAPTER
28	P000258930	DC JACK HARNESS
29	P000291240	MODULAR JACK HARNESS
30	P000293710	0.5MM FLAT CABLE
35	P000291200	BASE ASSEMBLY
35A	P000291450	USB COVER ASSEMBLY
35B	P000291460	EJECTOR HOLDER
35C	P000291470	I/O COVER ASSEMBLY
35D	P000291480	BATTERY LOCK LATCH
35E	P000258970	BATTERY LATCH
35F	P000291290	FAN COVER
35G	P000291490	MEMORY COVER
35H	P000291500	BATTERY LOCK HOLDER
35I	P000259020	BATTERY LATCH SPRING
35J	P000291510	BASE INSULATOR
35K	P000258980	BOTTOM CUSHION
40	P000291210	COVER ASSEMBLY
40A	P000291520	INVERTER HARNESS
40B	P000291530	LCD HARNESS
40C	P000272450	LED HARNESS
40D	P000272460	MIC HARNESS
40F	P000291550	LCD COVER ASSEMBLY
40FA	P000259110	LCD LATCH
40FB	P000259120	LCD LATCH HOLDER
40FC	P000259130	LCD HOOK
40FD	P000233860	PUSH SPRING
40FE	P000291560	INVERTER INSULATOR
40FF	P000275080	LCD UNIT GUM
40G	P000291570	HINGE COVER, LEFT
40H	P000291580	HINGE COVER, RIGHT
40I	P000272510	HINGE CAP, LEFT
40J	P000272520	HINGE CAP, RIGHT
40K	P000291590	LED LENS (4P)
40L	P000291600	BRAKE HINGE, LEFT
40M	P000291610	BRAKE HINGE, RIGHT

40N	P000291620	HARNESS HOLDER
40O	P000291630	SPEAKER NET
42A	P000278490	LCD CUSHION
44	P000291270	SHUTTER ASSEMBLY
45	P000291280	SWITCH HOLDER ASSEMBLY
46	P000291300	HDD BRACKET ASSEMBLY
47	P000291310	SPEAKER EARTH SPRING
48	P000291320	KEYBOARD HOLDER
49	P000291330	IPS SWITCH BUTTON
50	P000282460	DUMMY CARD
51	P000291340	HDD COVER
52	P000291350	SPEAKER HOLDER
53	P000291360	PANEL SWITCH SPRING
54	P000291370	IPS BRACKET
55	P000291380	RTC BATTERY INSULATOR
56	P000274120	INVERTER HOLD INSULATOR
57	P000291390	MODEM COVER ASSEMBLY
58	P000291400	USB GUIDE ASSEMBLY
59	P000296760	LCD COVER SEAL, LARGE
60	P000296770	LCD COVER SEAL, SMALL
61	P000259410	LCD MASK SEAL
62	P000291430	KEYBOARD BACK INSULATOR
63	P000291440	DOCKING CONNECTOR
OPTIONS		
OP01	KTT-SO100/32	32MB SDRAM MEMORY
OP01-A	KTT-SO100/64	64MB SDRAM MEMORY
OP01-B	KTT-SO100/128	128MB SDRAM MEMORY
OP02	PA2450U	UNIVERSAL AC ADAPTER
OP03	PA3000U-1BRL	BATTERY PACK
OP03-B	PA3001U-1BRL	BATTERY PACK
OP03-D	PA3002U-1BRL	BATTERY PACK
OP04	PA2508U	BATTERY CHARGER
OP05	PA3007U-1DST	10/100 NETWK/DVD DOCK II
OP06	PA2728U	I/O ADAPTER